

Les différents claviers

Easy One Touch Controls

High Pressure Settings

New! Cake Program

New! Egg Program

Automatic Keep Warm up to 10 hours

Delays start up to 24 hours



Dual Pressure Settings - High and Low

Automatic Keep Warm - Keeps food warm until ready to serve

Delay Start - Delays start time up to 24 hours

Adjustable Settings - Less, Normal, More - Achieves desired cooking

LED Panel



New! Large Blue LCD Display

New! Cooking Programs (Cake, Egg, and Sterilize)

New! 4 Status Icons

Indicates heating or cooking is in progress

Indicates Pressure Cook program is selected

Indicates Keep Warm program is ON or OFF

Indicates sound is ON or OFF when cooking starts or finishes



New! Altitude Adjustments

New! Cooking Progress Indicator

New! Dial for Program Selection and System Settings Adjustments

New! Customized Temperature Settings

New! Large Blue LCD Display



New! Touch screen interface

New! stream release function by simply touching 'Venting' on the screen

New! altitude adjustments

Real-time temperature and cooking displays



